

CLASS 3 TRAILER HITCH

**R3-0129**

Jeep Grand Cherokee


TOOLS REQUIRED:

DRILLS: NONE

WRENCHES: Ratchet, Torque Wrench,  
Socket Extension, 21mm

HITCH RATING: 5,000 LBS WEIGHT CARRYING, 500 LBS TONGUE WEIGHT / 7,500 LBS WEIGHT DISTRIBUTING, 750 LBS TONGUE WEIGHT.  
WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS. DO NOT EXCEED VEHICLE'S RECOMMENDED TOWING CAPACITY. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.

NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE

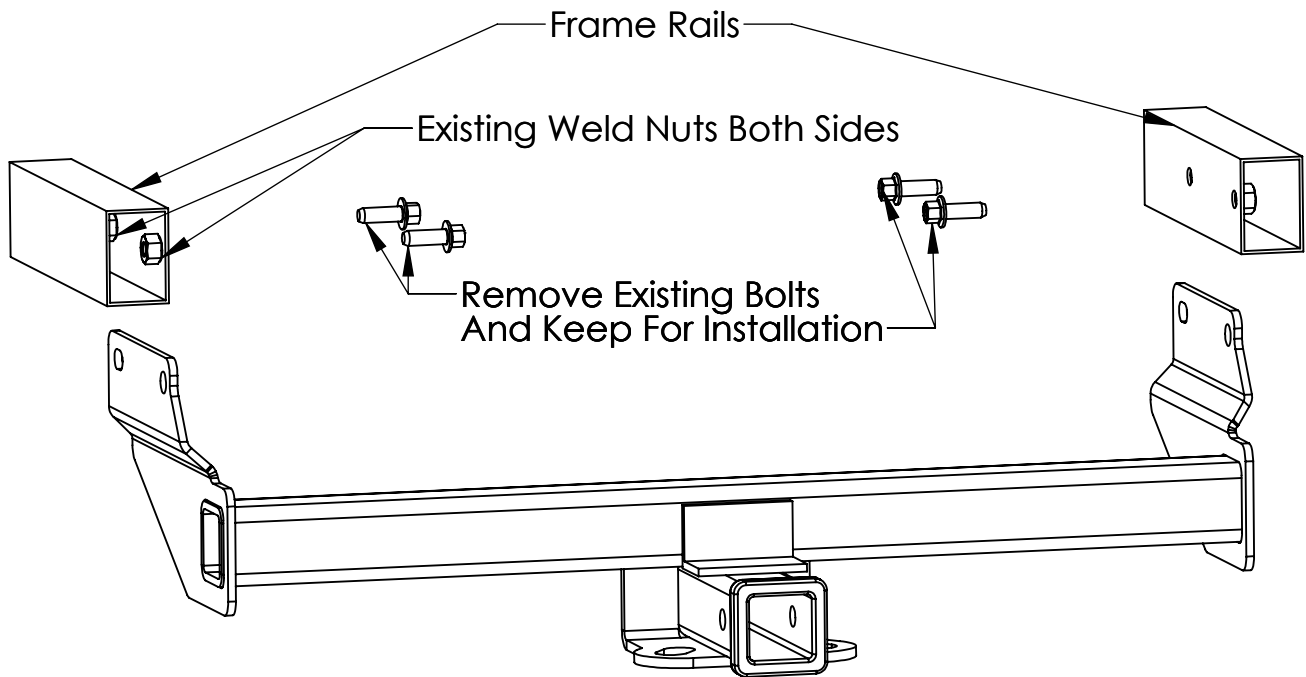

**Note:** Hitch uses existing hardware located on the vehicle for installation. No other hardware is required or included with this hitch.

1. Remove (4) existing M14 hex bolts and retain for reinstallation.
2. Raise hitch into position and reinstall hex bolts removed in step 1.
3. Use torque wrench and tighten all fasteners to 115 LB-FT.

**Thank you for purchasing a Rigid Hitch**

**GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER**

BOLT TIGHTENING TORQUE (LB-FT)			
BOLT SIZE	TORQUE	BOLT SIZE	TORQUE
3/8"	25 LB FT	8MM	20 LB FT
7/16"	50 LB FT	10MM	38 LB FT
1/2"	60 LB FT	12MM	68 LB FT
3/4"	120 LB FT	14MM	115 LB FT

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE AND VESC REGULATION V-5 FOR CONNECTING DEVICES AND TOWING SYSTEMS. DO NOT MODIFY THIS PRODUCT. INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

**RIGID**<sup>®</sup>  
**HITCH INCORPORATED**  
3301 WEST BURNSVILLE PARKWAY  
BURNSVILLE, MN 55337

REV.  
1/16