CLASS 3 TRAILER HITCH R3-0514

Nissan Roque


TOOLS REQUIRED: DRILLS: NONE

WRENCHES: Ratchet, Torque Wrench, Socket

Extension, 18mm, 19mm sockets

3,500 LB GROSS TRAILER WEIGHT, 525 LB TONGUE WEIGHT. THIS HITCH IS NOT RATED FOR WEIGHT DISTRIBUTING. WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS AND LIMITATIONS. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.

NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE

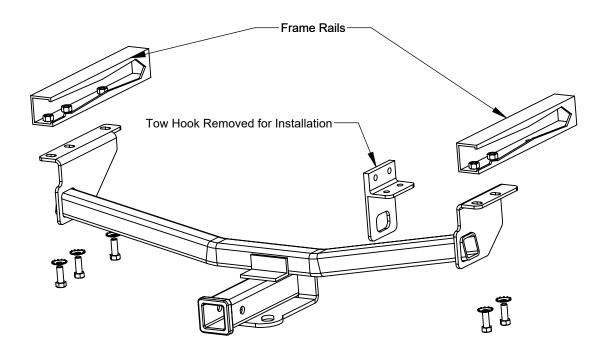

Note: Some models are equipped with appearance panels that cover the frame rails. Prior to installation remove the appearance panels. Return panels and plastic push pin fasteners to the vehicle owner.

- Remove the factory tow hook on the passenger side frame rail. Return tow hook and 1. fasteners to vehicle owner.
- 2. Raise the hitch into position and secure with the 12mm hex bolts and conical washers provided. Note: the teeth on the conical washers go up against the hitch.
- 3. Tighten all fasteners to 75 LB-FT

Thank you for purchasing a Rigid Hitch

HARDWARE PACKAGE:

- (5) 12mm X 1.25 X 35mm hex bolts (5) 1/2" conical washers

GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER



THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE J684 AND VESC REGULATION V-5 FOR CONNECTING DEVICES AND TOWING SYSTEMS. <u>DO NOT MODIFY</u> THIS PRODUCT. INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

